



Katherm QE

► Assembly, installation and operating instructions

Keep these instructions in a safe place for future use!

Table of contents

1 General	5
1.1 About these instructions	5
1.2 Explanation of Symbols.....	5
2 Safety.....	6
2.1 Correct use.....	6
2.2 Limits of operation and use.....	6
2.3 Risk from electrocution!.....	7
2.4 Personnel requirements - Qualifications	8
2.5 Personal Protective Equipment	8
3 Transport, storage and packaging.....	9
3.1 General transport instructions	9
3.2 Scope of delivery	9
3.3 Storage	10
3.4 Packaging	10
4 Technical data.....	11
5 Construction and function	12
5.1 Overview.....	12
5.2 Brief description	12
6 Installation and wiring	13
6.1 Requirements governing the installation site.....	13
6.2 Installation	13
6.2.1 Installation steps	13
6.2.2 Screed work.....	17
6.3 Installation	19
6.3.1 Connection to the pipe network	19
6.3.2 Fitting the grille	20
7 Electrical connection.....	22
7.1 Maximum electrical rating values	22
7.2 Electromechanical connection, 230 V (*00)	22
8 Pre-commissioning checks	28
9 Operation.....	29
9.1 Operation of electromechanical control	29
10 Maintenance	30

10.1 Securing against reconnection	30
10.2 Maintenance Schedule:	30
10.3 Maintenance work	30
10.3.1 Clean the inside of the unit	30
11 Faults	31
11.1 Fault table.....	31
11.2 Start-up after rectification of fault	31
12 Certificates.....	33

1 General

1.1 About these instructions

These instructions ensure the safe and efficient handling of this equipment. These instructions form an integral part of the equipment and have to be kept in the direct vicinity of the equipment and available to personnel at all times.

All personnel must have carefully read through these instructions prior to commencing all work on the equipment. A fundamental prerequisite for safe working is compliance with all the stated safety instructions and other instructions contained in this manual.

In addition all local occupational health and safety at work regulations apply, as do general safety provisions governing the use of the equipment.

Illustrations in this guide are intended to provide a basic understanding and may differ from the actual model.

Ongoing tests and further developments may result in small variations between the unit supplied and the instructions.

1.2 Explanation of Symbols



DANGER!

This combination of symbol and signal word indicates an immediately dangerous situation caused by electrical power, which will cause death or serious injury if not avoided.



WARNING!

This combination of symbol and signal word indicates a possible hazardous situation.



IMPORTANT NOTE!

It represents a potentially hazardous situation, which could lead to damage to property or for a measure to optimise workflows.



IMPORTANT NOTE!

This symbol highlights useful hints, recommendations and information for efficient and trouble-free operation.

Katherm QE

Assembly, installation and operating instructions

2 Safety

This section provides an overview of all important safety aspects to ensure optimum protection of personnel as well as safe and trouble-free operation. In addition to the safety instructions in these operating instructions, the valid safety, accident prevention and environmental protection regulations must be observed for the area of use of the unit. It is the duty of the operator to ensure that instructions relating to maintenance (e.g. relating to hygiene) are complied with.

2.1 Correct use

Katherm QE are used to heat indoor spaces (e.g. living rooms, commercial spaces and showrooms). Within the room to be heated, the unit needs to be connected to the in-situ power grid. Observe the operating limits and limits of use described in Chapter 2.2 [► 6].

Intended use of the unit also includes adherence to these instructions.

Information in accordance with EN60335-1

- ▶ This unit can be used by children aged 8 years or more and also by people with reduced physical, sensory or mental capabilities or a lack of experience and knowledge, if they are supervised or have been instructed in the safe use of the unit and the resulting dangers. Do not allow children to play with the unit. Do not allow children to clean and maintain the unit without supervision.
- ▶ The unit is not intended for operation above 2,000 m.a. s.l.
- ▶ This unit is designed to be accessible to the general public.

Any use beyond or other than the stated intended use is considered as misuse.

Any use that goes beyond the intended use or any other type of use may result in fire, electric shock or personal injury.

Any modification to the unit or use of non-original spare parts will cause the expiry of the warranty and will invalidate the manufacturer's liability.

2.2 Limits of operation and use

Operating voltage	230 V/ 50/60 Hz
Power/current consumption	On the typeplate

Tab. 1: Operating voltage



IMPORTANT NOTE!

Warning of misuse!

In the event of misuse, as outlined below, there is a danger of restricted or failed operation of the unit. Ensure that the air flow can circulate freely.

- ▶ Never operate the unit in humid areas, such as swimming pools, wet areas etc.
- ▶ Never operate the unit in rooms with an explosive atmosphere.
- ▶ Never operate the unit in aggressive or corrosive atmospheres (e.g. sea air).
- ▶ Never use the unit as a site heater.
- ▶ Never use in rooms with a high dust content.
- ▶ Never operate the unit at the wrong operating voltage.
- ▶ Never operate the unit in a covered state.
- ▶ Never operate the unit without the cover grille supplied.

2.3 Risk from electrocution!



DANGER!

Risk of fatal injury from electrocution!

Contact with live parts will lead to fatal injury from electric shocks. Damage to the insulation or individual components can lead to a fatal injury. There is a risk of fatal injury if the wiring is incorrect or cables are transposed.

- ▶ Only permit qualified electricians to work on the electrical system.
- ▶ Disconnect and de-energise the unit before working on it and prevent it from being re-connected.
- ▶ After shut-down, wait until the fan has come to a standstill.
- ▶ Immediately disconnect the system from the power supply and repair it in the event of damage to the insulation.
- ▶ Keep live parts away from moisture. This can cause a short circuit.
- ▶ Properly earth the unit.

2.4 Personnel requirements - Qualifications

Expertise

The installation of this product requires specialist expertise in heating, cooling, ventilation, installation and electrical engineering. As this knowledge is normally acquired through professional training in one of the above fields, it is not dealt with further here.

Damage caused by improper installation is the responsibility of the operator or installer. Installers of these units should have adequate knowledge of the following based on their qualifications

- ▶ Safety and accident prevention regulations
- ▶ Guidelines and recognised technical regulations, i.e. VDE regulations (Association of German Electricians, DIN and EN standards).

The installation, operation and maintenance of this unit must comply with the applicable laws, standards, provisions and regulations in the respective country and the current state of the art.

2.5 Personal Protective Equipment

Personal protective equipment is used to protect people from impaired safety and health when working with the unit. The applicable accident prevention regulations at the place of use apply in all cases.

Personnel have to wear personal protective equipment during maintenance and troubleshooting on and with the unit.

3 Transport, storage and packaging

3.1 General transport instructions

Check on delivery for completeness and transport damage.

Proceed as follows in the event of visible damage:

- ▶ Do not accept delivery or only accept with reservations.
- ▶ Record any transport damage on the transportation documents or on the transport company's delivery note.
- ▶ Submit a complaint to the freight forwarder.

**IMPORTANT NOTE!**

Warranty claims can only be made within the applicable period for complaints. (More information is available in the T&Cs on the Kammann website)

**IMPORTANT NOTE!**

2 people are needed to transport the unit. Wear personal protective clothing when transporting the unit. Only lift the unit on both sides and not by the pipes / valves.

**IMPORTANT NOTE!****Material damage caused by incorrect transport!**

Units being transported can drop or topple over if transported wrongly. This can cause serious material damage.

- ▶ Proceed carefully when unloading the equipment on delivery and when transporting it on site and note the symbols and instructions on the packaging.
- ▶ Only use the holding points provided.
- ▶ Only remove packaging shortly before assembling the unit.

3.2 Scope of delivery

**IMPORTANT NOTE!****Check the scope of delivery!**

- ▶ Check the delivery for damage.
- ▶ Check that the articles and type numbers are correct.
- ▶ Is the delivery and number of items delivered correct?

Katherm QE

Assembly, installation and operating instructions

3.3 Storage

Store packaging under the following conditions:

- ▶ Do not store outdoors.
- ▶ Store in a dry and dust-free place.
- ▶ Store in a frost-free place.
- ▶ Do not expose to aggressive media.
- ▶ Protect from direct sunlight.
- ▶ Avoid mechanical vibrations and shocks.



IMPORTANT NOTE!

Under certain circumstances, packages can carry storage instructions that exceed the requirements listed here. Comply with these instructions accordingly.

3.4 Packaging

Handling packaging materials



IMPORTANT NOTE!

Dispose of packaging materials in line with the applicable statutory requirements and local regulations.



IMPORTANT NOTE!

The packaging is also use to protect the product from site dust and dirt. Only remove packaging shortly before assembling the unit.

4 Technical data

Operating level [V]	Control signal [V]	Heating power [W]	Electrical power consumption fan [W]	Current consumption 230 V [A]	Sound pressure level [dB(A)] ⁴	Sound power level [dB(A)]	Air volume flow [m³/h]	Discharge temperature [°C]
Duct length 825 mm								
Power stage	10	800	6	3.5	28	36	91	46.2
Design stages	8	660	5	3.1	26	34	86	42.9
	6	500	4	2.4	21	29	70	41.3
	4	320	3	1.5	< 20 ⁶	< 28 ⁶	52	38.4
Minimum stage	2	160	3	0.7	< 20 ⁶	< 28 ⁶	43	31.1
Duct length 1250 mm								
Power stage	10	1600	7	7	31	39	183	46.1
Design stages	8	1320	6	6.3	29	37	172	42.9
	6	1000	5	4.7	24	32	139	41.5
	4	640	4	3	< 20 ⁶	< 28 ⁶	104	38.4
Minimum stage	2	320	3	1.5	< 20 ⁶	< 28 ⁶	87	31
Duct length 1700 mm								
Power stage	10	2400	7	10.6	33	41	274	46.1
Design stages	8	1980	6	9.5	31	39	258	42.9
	6	1500	5	7.2	26	24	209	41.4
	4	960	4	4.5	< 20 ⁶	< 28 ⁶	156	38.4
Minimum stage	2	480	3	2.2	< 20 ⁶	< 28 ⁶	130	31

Tab. 2: Technical data Katherm QE

⁴ The sound pressure level was calculated with an assumed room insulation of 8 dB(A). This corresponds to a distance of 2 m, a room volume of 100 m³ and a reverberation time of 0.5 s (in accordance with VDI 2081).

⁶ Sound pressure level < 20 dB (A) and sound power level < 28 dB (A) outside the usual measuring and audible range.

Katherm QE

Assembly, installation and operating instructions

5 Construction and function

5.1 Overview

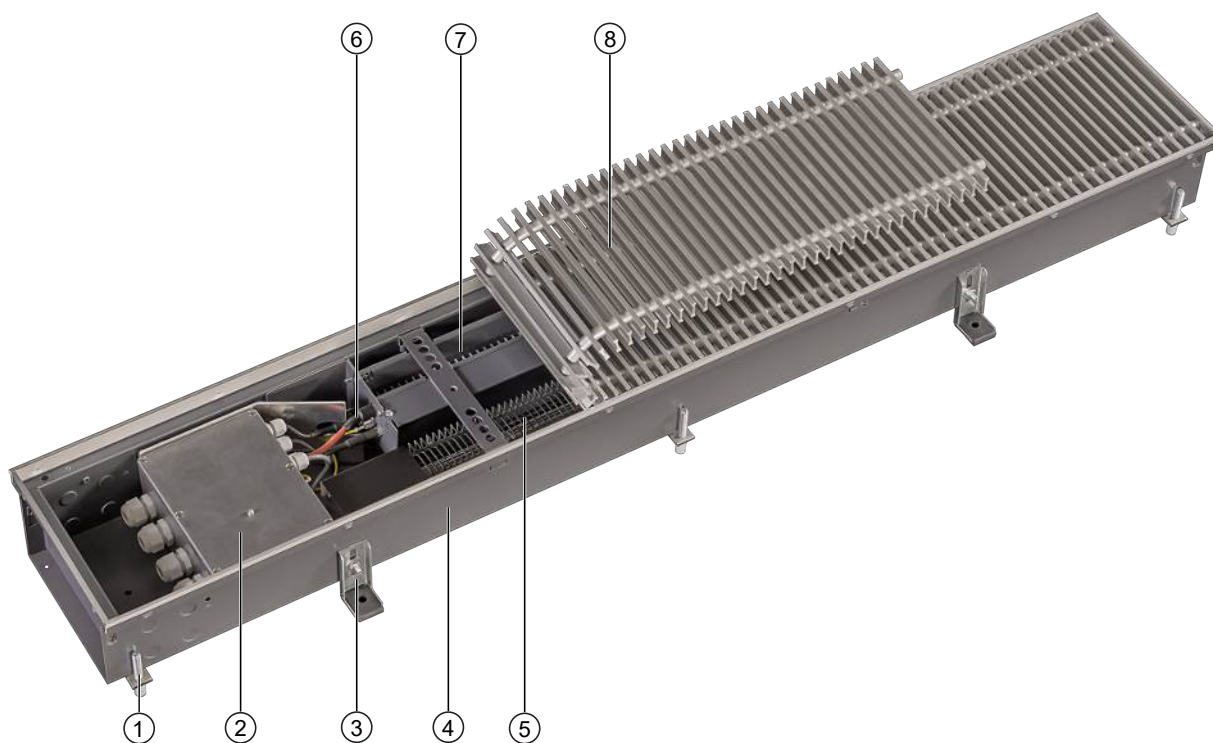


Fig. 1: Katherm QE at a glance

1	Load-bearing height adjustment feet	2	Junction and control box
3	Height adjustment feet with sound insulation	4	Floor trench
5	EC tangential fan	6	Safety pipe
7	Electric heating coil	8	Roll-up grille

5.2 Brief description

Katherm QE are decentralised units to heat room air, for use in hotels, offices and business premises, among others. Secondary air is drawn in by the fan and passed through the electric heating coil. The temperature-controlled air rises up the façade of the building to create a pleasant indoor climate.

6 Installation and wiring

6.1 Requirements governing the installation site

Only install and assemble the unit if the following conditions are met:

- ▶ Make sure that the unit is securely suspended/standing.
- ▶ Ensure that the airflow can circulate freely.
- ▶ There is a power supply on site (Maximum electrical rating values [▶ 22]).

6.2 Installation

2 people are needed to install the unit.



CAUTION!

Risk of injury from sharp metal housing!

The inner metal of the casing can have sharp edges.

- ▶ Wear suitable protective gloves.



IMPORTANT NOTE!


Horizontal installation of units!


When installing the units, ensure that they are completely horizontal to ensure proper operation.

Katherm QE

Assembly, installation and operating instructions

6.2.1 Installation steps

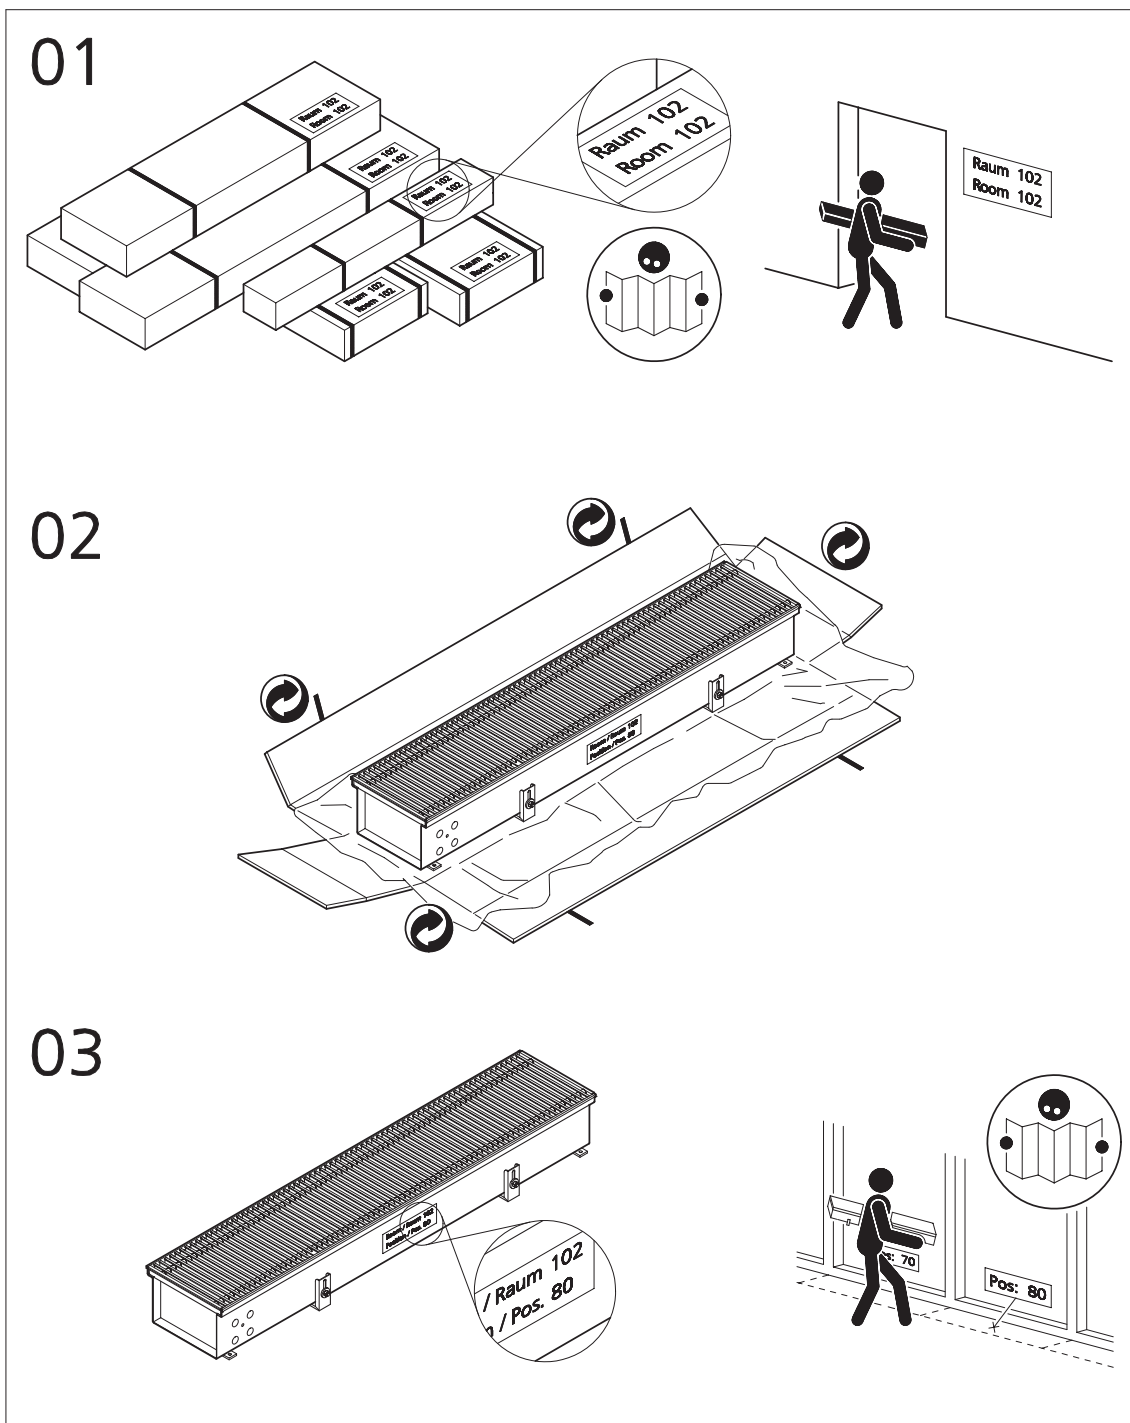

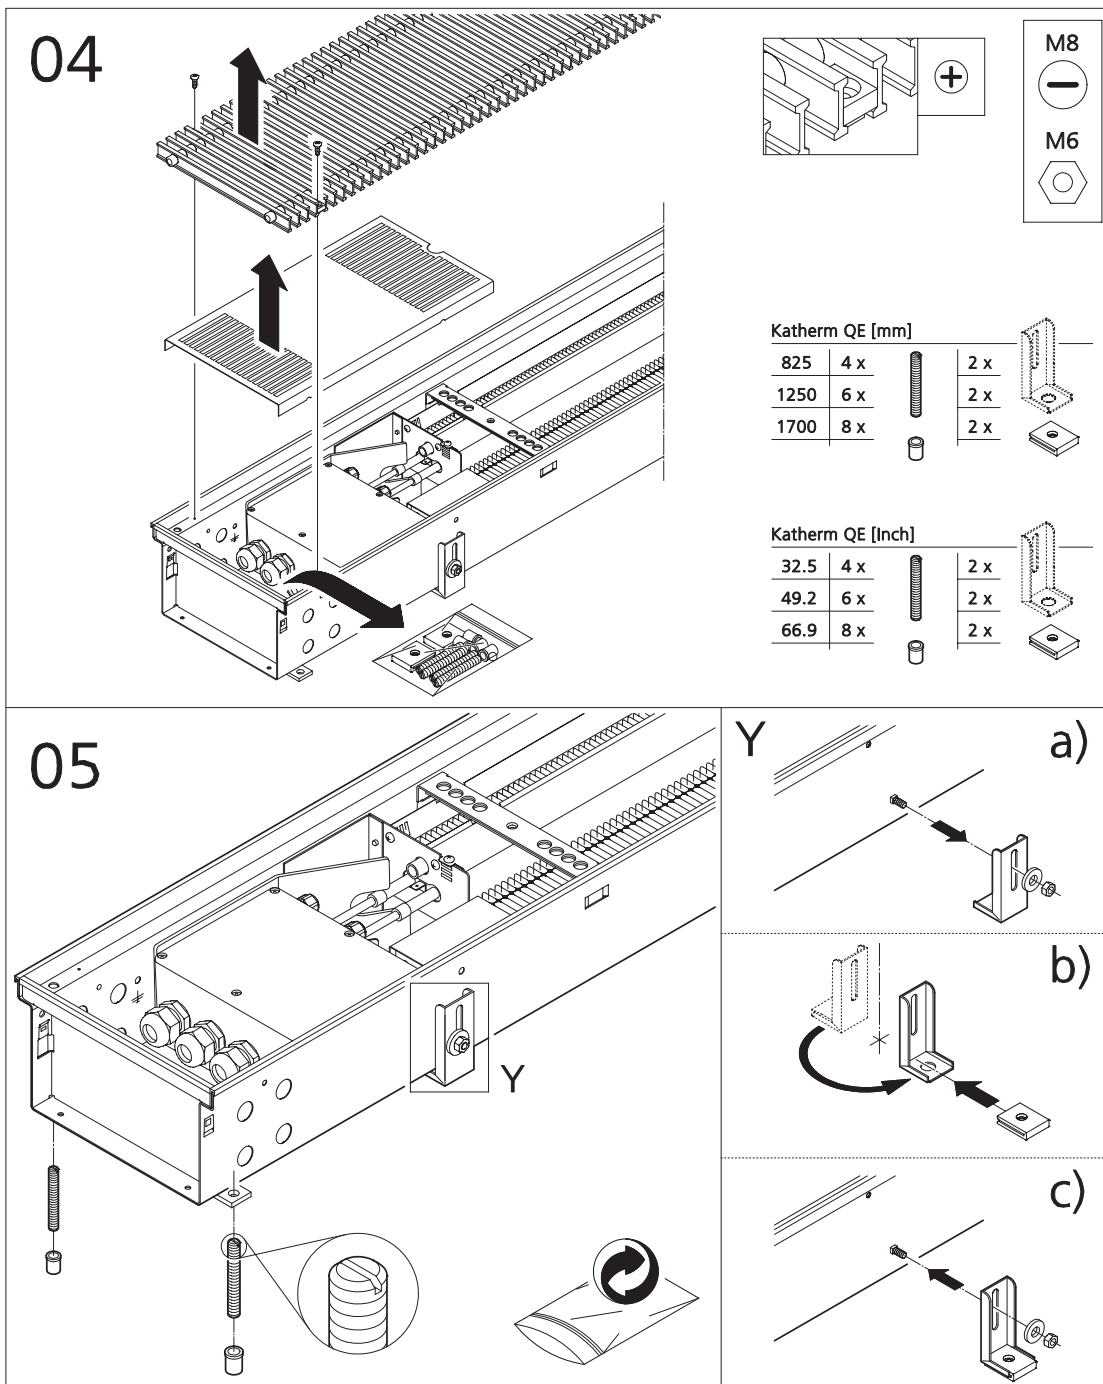

05


Y
a)


Y
b)

Y
c)

Katherm QE

Assembly, installation and operating instructions

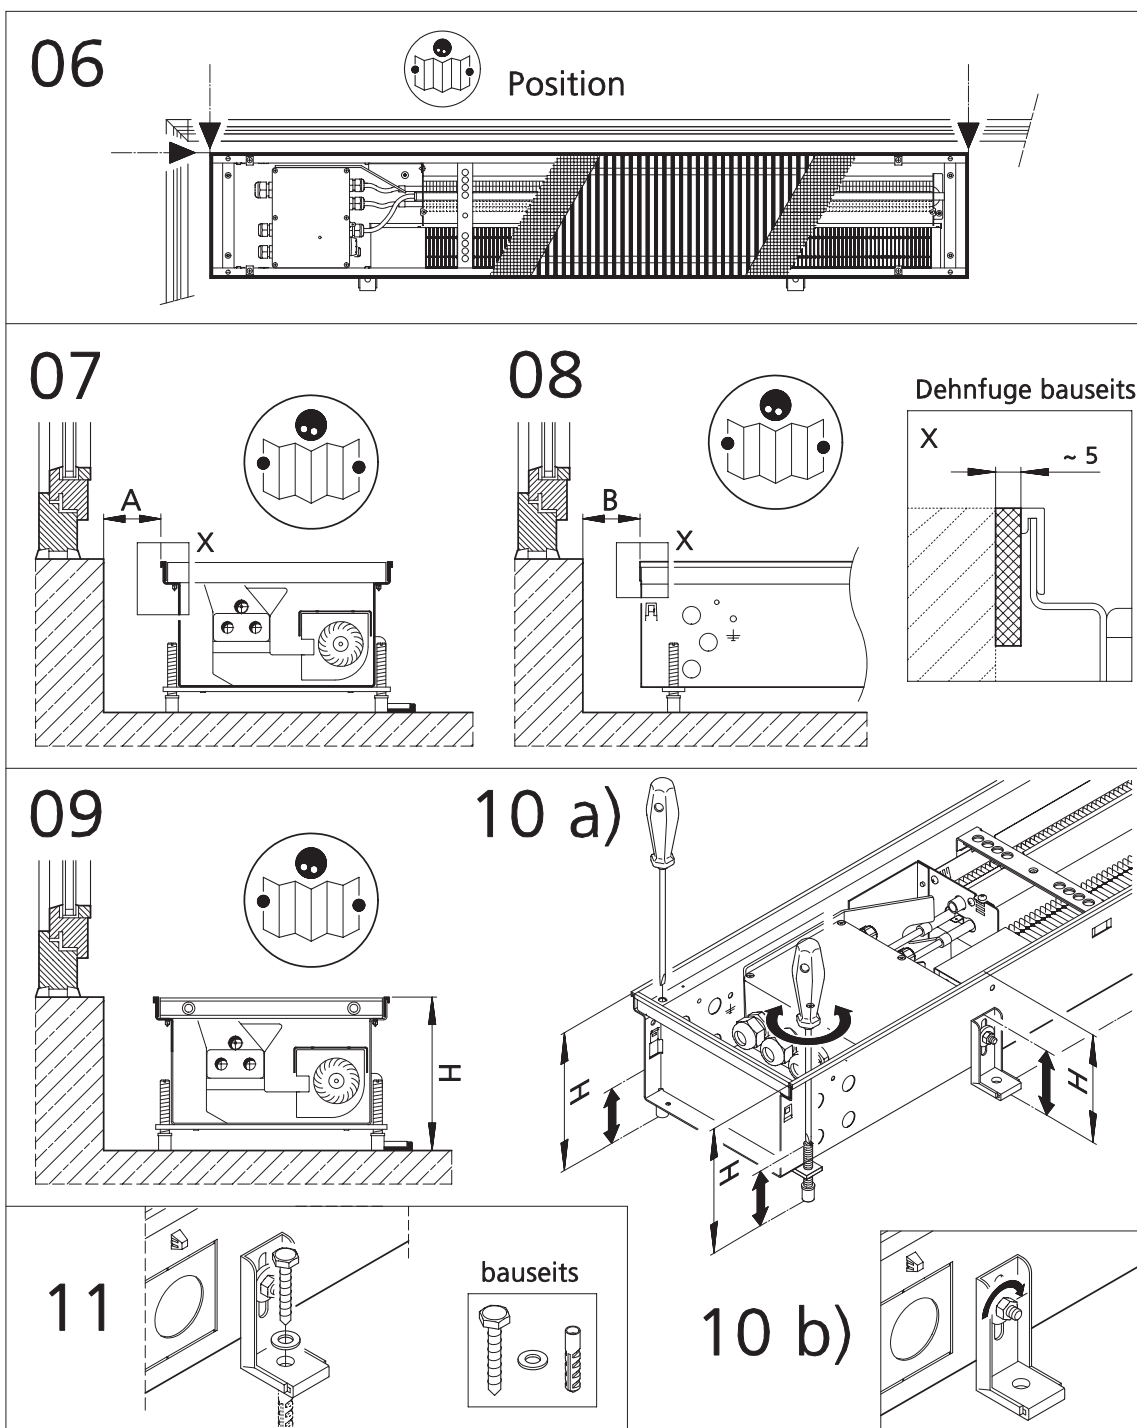

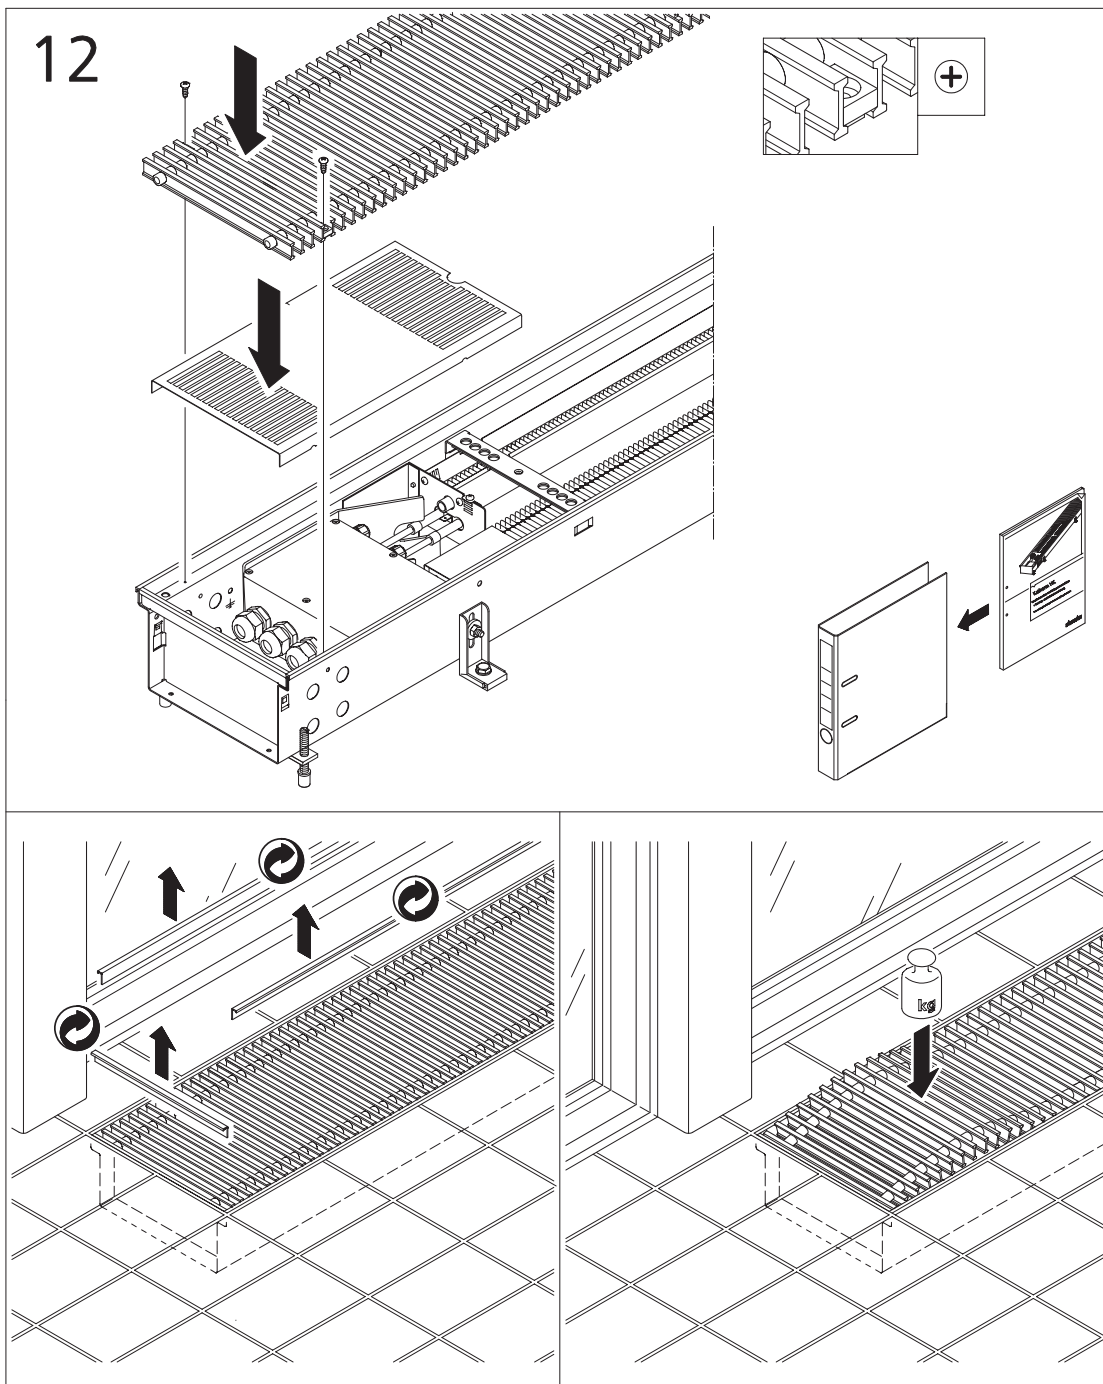

Separately packed roll-up grilles, for instance when using installation covers to protect the trenches from dirt, are rolled up in the factory. The grille can become slightly over-long due to the steel springs extending. Unrolling the grille and laying it flat for a few hours can return the grille to its original length. Laying the grille into the trench helps it to fit more easily into the frame.

Katherm QE

Assembly, installation and operating instructions


6.2.2 Screed work

The following work steps must be completed before screed work:

- ▶ The electrical connection has been made correctly.
- ▶ The appliance is correctly positioned and aligned.
- ▶ There are no sound bridges to the bare concrete, especially in the area of the mounting aids.
- ▶ Expansion joints have been provided on site to prevent the appliance from being compressed by the screed or floor.
- ▶ All necessary empty conduits have been laid.
- ▶ All punched holes and openings in the appliance are sealed against screed with suitable material. If flowing screed or other low-viscosity floor coverings are used, these must also be sealed!

6.3 Installation

6.3.1 Connection to the pipe network

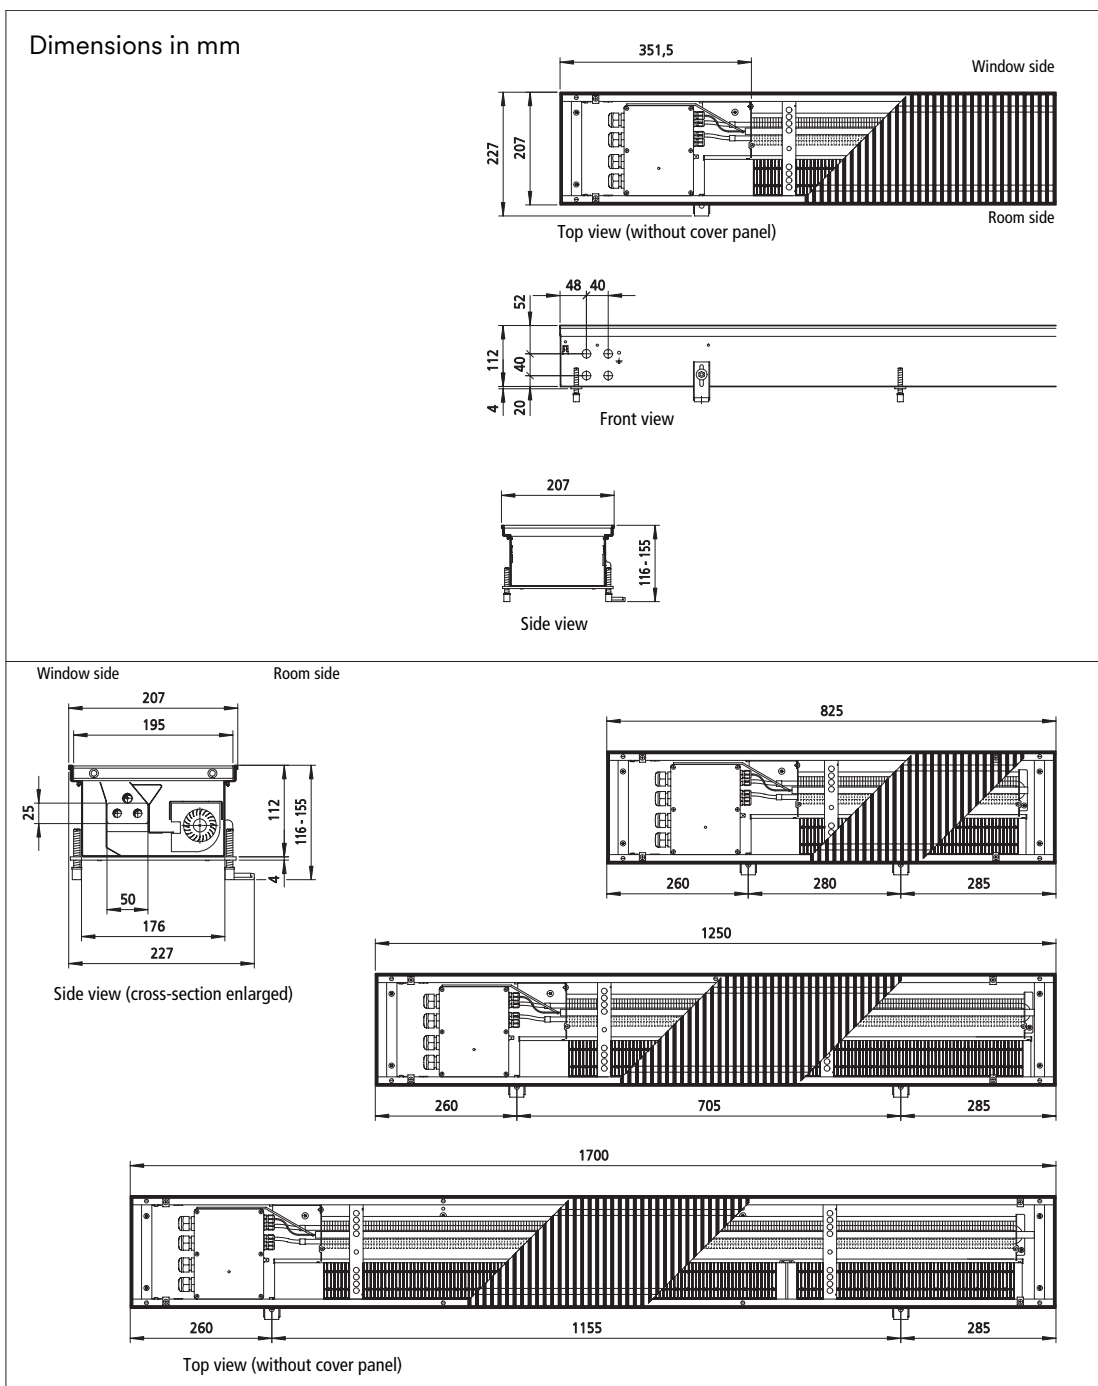

Katherm QE

Assembly, installation and operating instructions

6.3.2 Fitting the grille

High surface temperatures occur at the electric heating coil. For this reason, additional grille fixings are factory-fitted on both longitudinal sides of the duct as a safety guard. They can be removed using a screwdriver. The grille fixing only needs to be removed on one side, the electrical connection side, when wiring. Once wiring has been completed, attach the grille fixing again as per the figure.

Installation cover:

Caution: Do not operate the Katherm QE or the electric heating coil with the installation cover in place. After removing the installation cover, position the grille and screw in place with the grille fixings and the self-tapping screws.

Do not cover the roll-up grille when the unit is in operation!

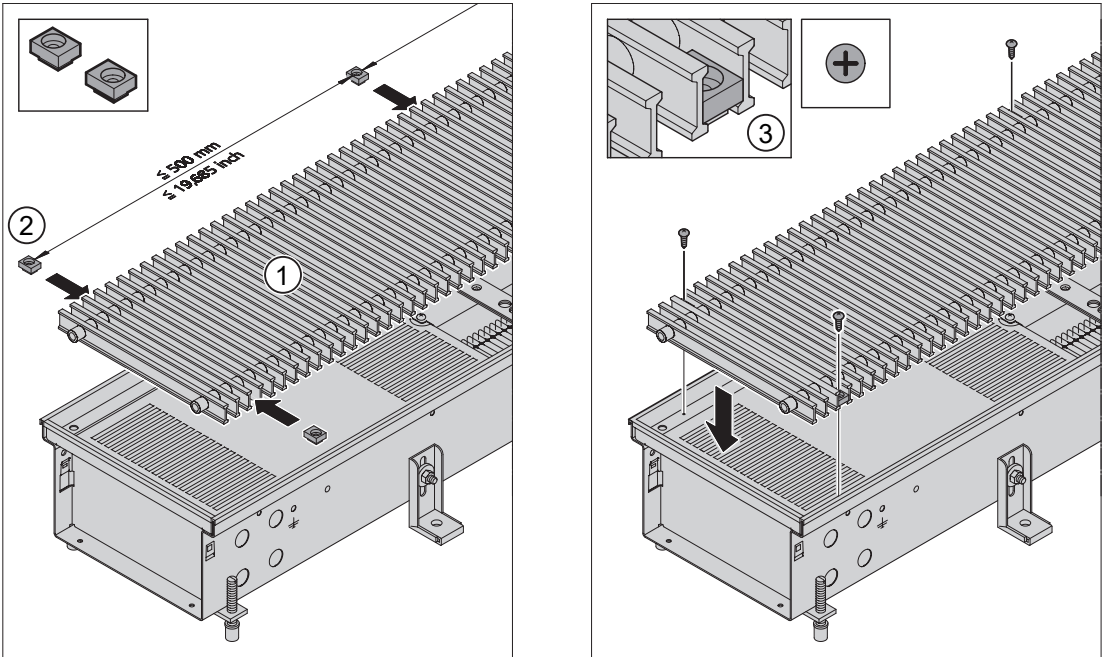



Fig. 2: Grille fixing

1	Roll-up grille	2	Grille fixing with self-tapping screws
3	Detail of grille fixing		

Fixing the grille on trench extensions

Proceed as follows to adapt the grille to structural conditions on site with trench extensions:

- ▶ Loosen the fastening screws.
- ▶ Position the grille.
- ▶ Re-position and attach the grille fixings.
- ▶ Note the spacing of the grille fixings.

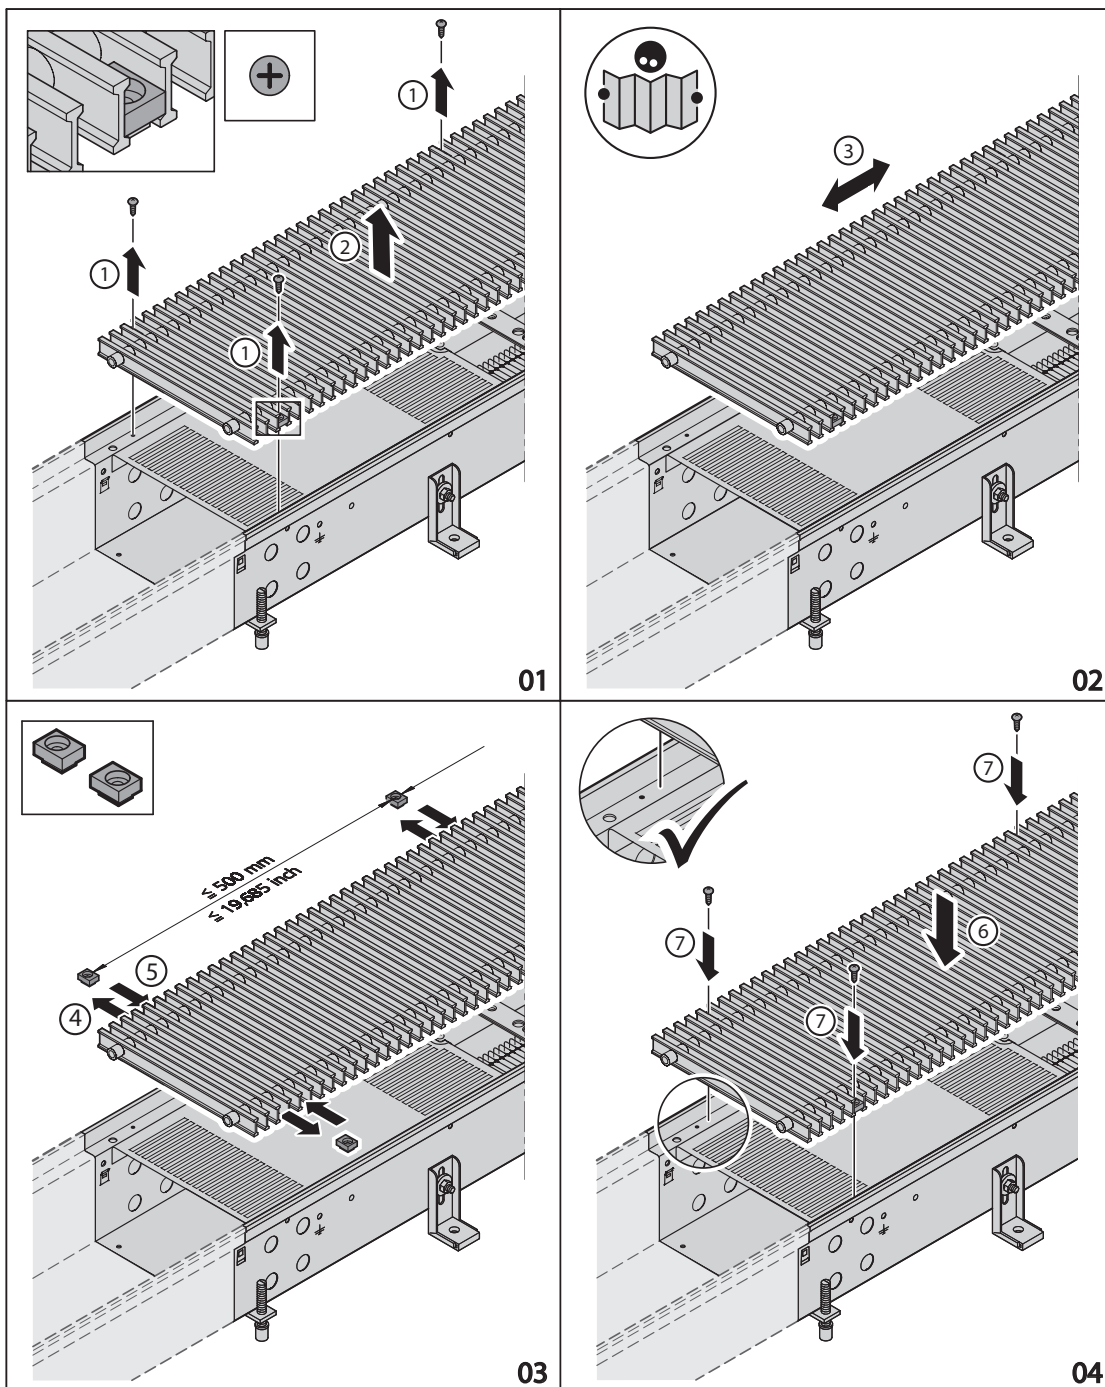

Katherm QE

Assembly, installation and operating instructions

7 Electrical connection



IMPORTANT NOTE!

Provide an all-pole mains separator in the electrical installation on site that can be reliably secured to avoid the system being reconnected (e.g. a lockable switch with a contact opening of at least 3 mm up to a rated voltage of 480 V). No protective measures are indicated in the wiring diagrams. These must be provided when installing the system and when connecting the units in accordance with VDE 0100 and the regulations of each energy supply company.

7.1 Maximum electrical rating values

Katherm QE, electromechanical version

Overall length [mm]	Rated voltage [VAC]	Mains frequency [Hz]	Rated power [W]	Rated current [A]	Ri analog input [kΩ]	Protection class [IP]	Protection class
825	230	60	800	3.5	100	21	I
1250	230	60	1600	7.0			
1700	230	60	2400	10.6			

Tab. 3: Maximum electrical connection values, electromechanical version

7.2 Electromechanical connection, 230 V (*00)

Circuit description Katherm QE

- ▶ Katherm QE require a power supply of 230 VAC.
- ▶ The output of the electric heating coil and the EC fan are continuously controllable via a 0-10 V DC signal.
- ▶ Internal safety cut-out: In the event of improper use, the heating output is reduced or switched off.
- ▶ Temperature monitoring takes place via an additional NTC10K sensor in the safety chain. If the temperature exceeds 65 °C (149 °F), the heating power is automatically reduced. The heating element is switched off at a temperature of 80 °C (176 °F).
- ▶ Faults (motor fault, electric heater fault, etc.) are indicated via a potential-free collective fault signal contact (max. 60 V/ 1 A).
- ▶ Once the cause of the fault has been rectified, the fault message can be acknowledged by resetting the supply voltage.

Control via 0 - 10 V DC

With a control signal of 2 V, the EC tangential fan is operated at the minimum speed and the electric heating coil is activated with the lowest heat output.

Control signal	Function
0 V	Off
2 V - 9 V	0 - 100%

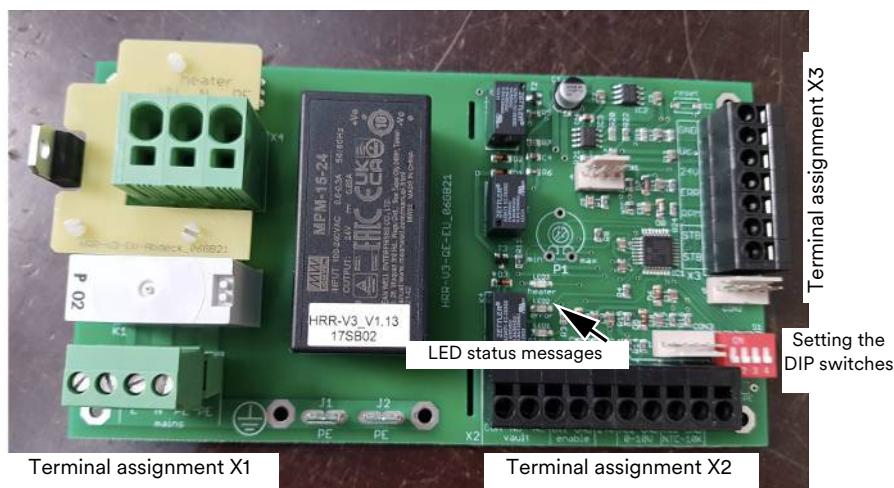
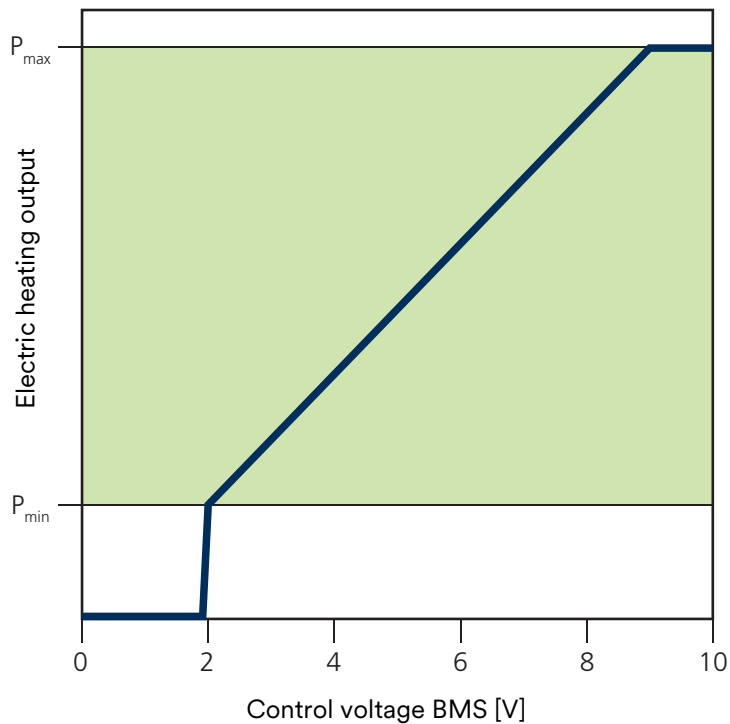


Fig. 3: Katherm QE circuit board (230 V)

Katherm QE

Assembly, installation and operating instructions

Terminal assignment		
X1	mains	Mains connection (203 V/ 50 Hz)
X2	vault	Floating fault signal output (max. load 60 V AC/DC 1 A)
	Enable	DI1, potential-free enable contact
	24 V	Voltage output 24 VDC (max. 40 mA)
	0 - 10 V	AI1, control signal 0...10 V = heating power 0...100% (Ri = 100 KΩ)
	NTC 10K	AI2, temperature sensor
X3	STB	Safety temperature limiter
	RPM	Input signal of the number of revolutions of the EC tangential fan
	ERR	Input signal of the status of the EC tangential fan
	24 V	Supply voltage (+) for the EC tangential fan
	GND	Supply voltage (-) for the EC tangential fan

DIP switch settings

DIP	Factory setting	OFF	ON
DIP 1	OFF	Enable not required	Enable required
DIP 2	OFF	Speed increase Off	Speed increase On
DIP 3	OFF	Minimum heat output = 20%	Minimum heat output = 30%
DIP 4	OFF	Power reduction 100%	Power reduction 90%

LED status messages

LED	Function	Color	Color Code	Code Description
1	Status	Green	OFF	No voltage / error
			Flashes cyclically	Control active
			Alternating flashing fast/slow	Enable DI1 missing
			Lights up	Ready for operation
2	Fault message	Red	Flashes 1x	EC motor fault
			2x flashing	EC motor speed
			3x flashing	Temperature sensor circuit board has triggered
			Flashes 4x	Power reduction over 50%
			Flashes 5x	Sensor short circuit
			Lights up	STB has triggered
3	Heating	Yellow	Flashes cyclically	E-heater PWM signal
			Lights up	Electric heater 100%

Status coding of the red fault signal LED

Lights up = continuously lit

1 x flashing = On (0.2 sec.) Off (0.8 sec.) ...

2 x flashing = On (0.2 sec.) Off (0.8 sec.) On (0.2 sec.) Off (2 sec.) ...

3 x flashing = On (0.2 sec.) Off (0.8 sec.) On (0.2 sec.) Off (0.8 sec.) On (0.2 sec.) Off (2 sec.) ...

4 x flashing = On (0.2 sec.) Off (0.8 sec.) On (0.2 sec.) Off (0.8 sec.) On (0.2 sec.) Off (0.8 sec.) On (0.2 sec.) Off (2 sec.) ...

5 x flashing = On (0.2 sec.) Off (0.8 sec.) On (0.2 sec.) Off (0.8 sec.) On (0.2 sec.) Off (0.8 sec.) On (0.2 sec.) Off (0.8 sec.) On (0.2 sec.) Off (2 sec.) ...

Alternating = On (0.5 sec.) Off (0.2 sec.) On (0.1 sec.) Off (0.2 sec.) ...

Information on cable laying:

The following information on cable types and cable routing must be observed in accordance with VDE 0100.

The installation, operation and maintenance of these devices must comply with the applicable national laws, standards, regulations and directives.

Without *: NYM-J. The required number of cores including protective conductor is indicated on the cable. Cross-sections are not specified, as the cable length is included in the calculation of the cross-section.


*): Shielded cable, J-Y(STY) 0.8mm. Lay separately from power cables.


**): Shielded, twisted-pair cable, e.g. UNITRONIC® BUS LD 2x2x0.22, UNITRONIC® BUS LD 3x2x0.22. Lay separately from power cables.


- If other cable types are used, they must be at least equivalent.
- The connection terminals on the device are suitable for a maximum wire cross-section of 2.5 mm².
- If residual current circuit-breakers are used, these must be at least mixed-frequency sensitive (type F). The specifications in DIN VDE 0100 Parts 400 and 500 must be observed when designing the rated residual current.
- The electrical data must be observed when designing the on-site mains supply and fuse protection.
- Cables for data or bus signals are shown with the shield connected at one end. Cables for analog signals are shown with the shield not connected. Due to structural or local conditions and depending on the type and level of interference, which may be caused by magnetic and/or electric fields in high and/or low frequency ranges, it may be necessary to connect the shield differently (connected at both ends or not connected). This must be checked on site and, if necessary, implemented differently from the specifications in the documentation!

Electromechanical:

- Cable length between room thermostat and temperature sensor or switching contact: maximum 50 m.

Bearbeiter:	Projekt:	General Information		Blatt-Nr.:	
	Erstelldatum: 01.03.2024	Katherm QE		2 von	5
Projekt-Nr.:		 Genau mein Klima.			

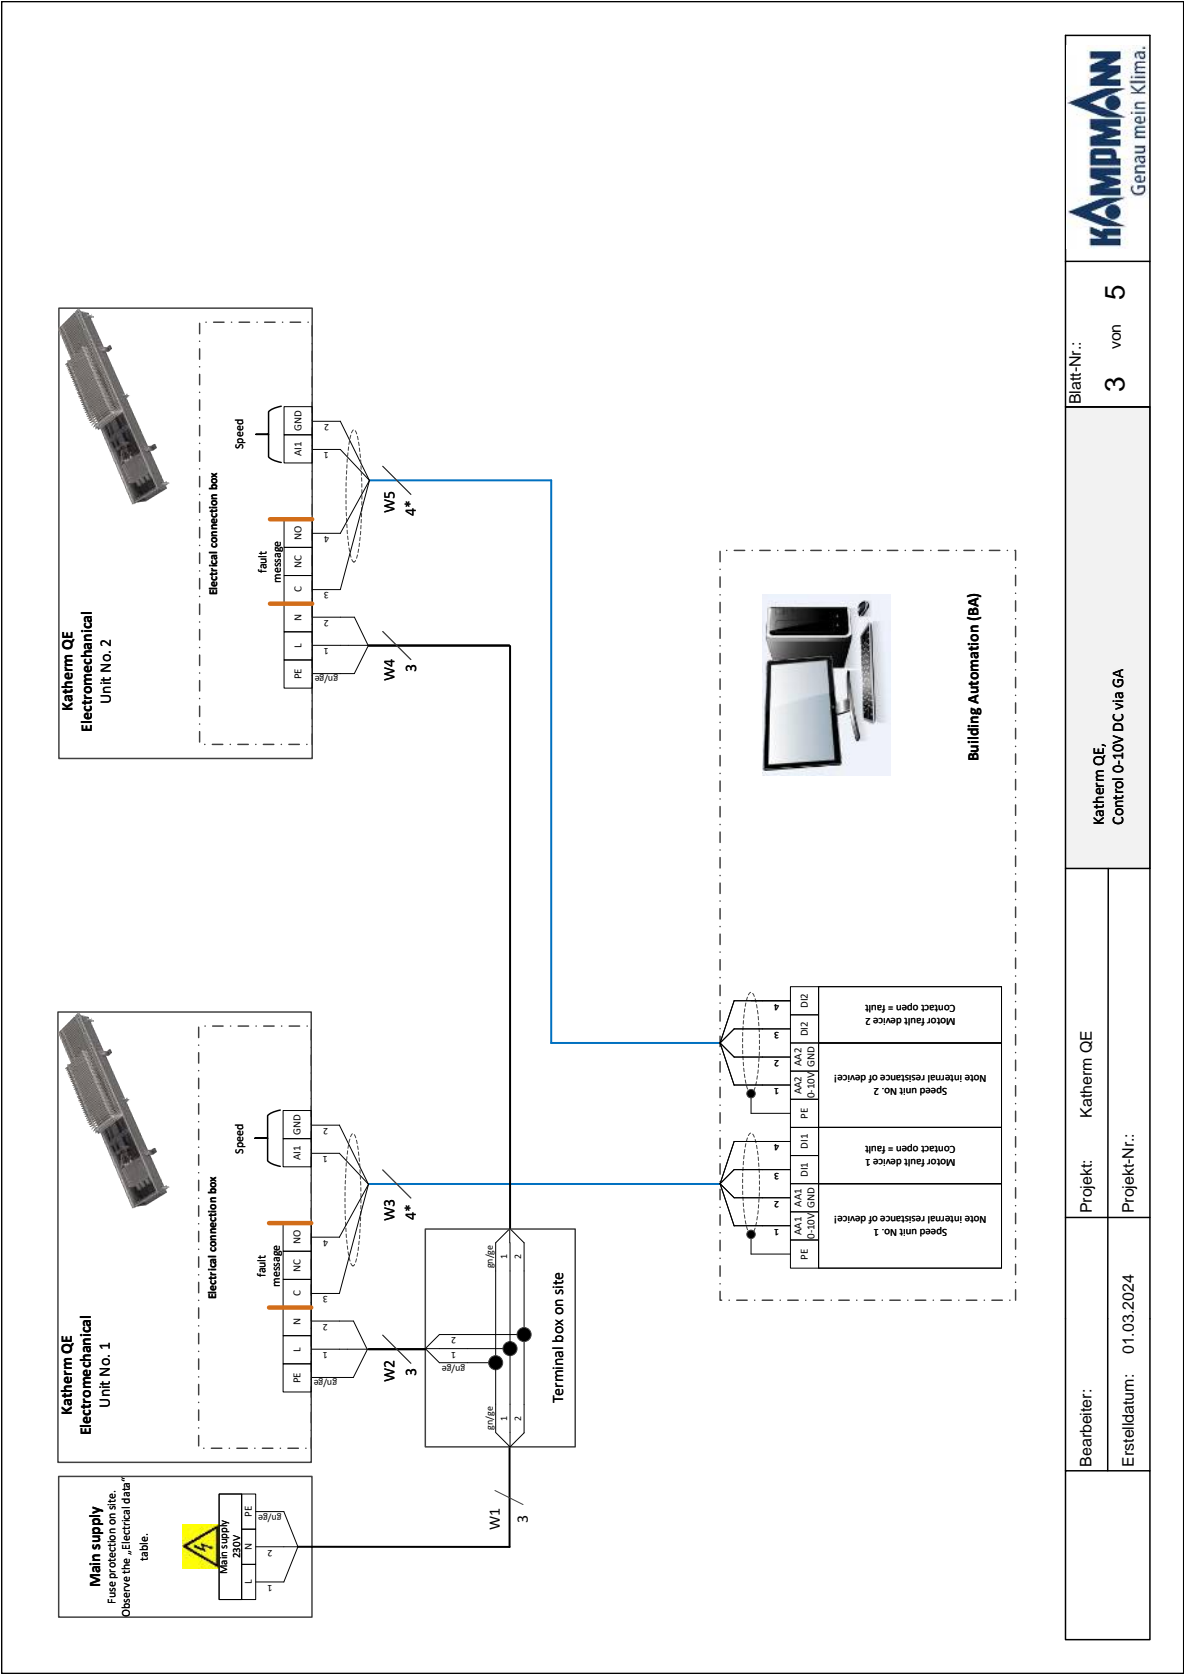

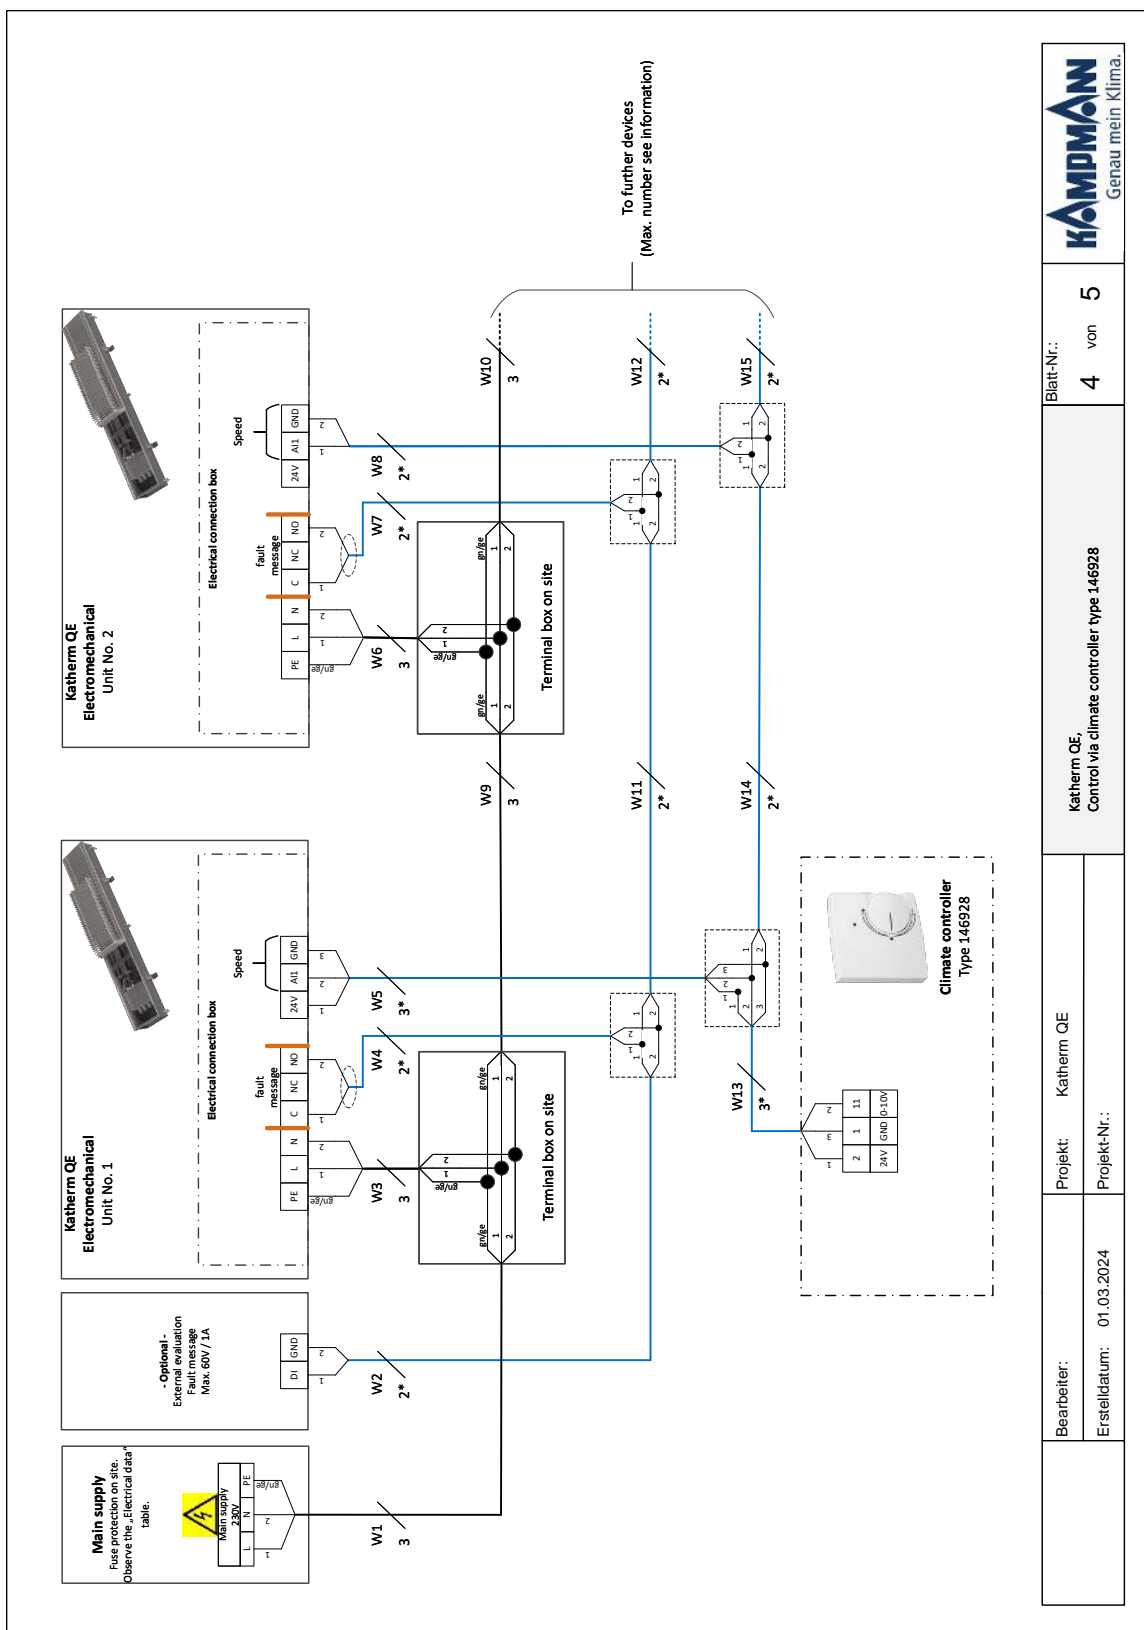

8 Pre-commissioning checks

During initial commissioning, it must be ensured that all necessary requirements are met so that the appliance can function safely and as intended.

Structural tests

- ▶ Check that the unit is securely standing and fixed.
- ▶ Check the horizontal installation/suspension of the unit.
- ▶ Check whether all components are properly fitted.
- ▶ Check whether all dirt, such as packaging or site dirt, has been removed.

Electrical tests

- ▶ Check whether all lines have been properly laid.
- ▶ Check whether all lines have the necessary cross-section.
- ▶ Is the earth wire connected and wired throughout?
- ▶ Check all external electrical connections and terminal connections are fixed in place and tighten if necessary.


Air-side checks

- ▶ Check whether there is unimpeded flow at the air inlet and outlet.

Once all checks have been completed, initial commissioning can be carried out in line with Chapter 9 "Operation" [▶ 29].

9 Operation

9.1 Operation of electromechanical control

	<p>Room temperature controller type 146928</p> <ul style="list-style-type: none"> ▶ room temperature controller for 2- and 4-pipe applications, surface-mounted wall installation on a flush-mounted box ▶ setpoint display by threshold arrows ▶ heating or cooling via active 0-10 V signals ▶ option for external room sensor connection ▶ digital input for ECO operation
---	---

Katherm QE

Assembly, installation and operating instructions

10 Maintenance

10.1 Securing against reconnection



DANGER!

Risk of death by unauthorised or uncontrolled restart!

Unauthorised or uncontrolled restarting of the equipment can result in serious injury or death.

- Before restarting, ensure that all safety devices are fitted and working properly and that there is no hazard to humans.

Always follow the procedure described below to prevent accidental restart:

1. de-energise.
2. Prevent accidental re-connection.
3. Check that the equipment is de-energised.
4. Cover and cordon off adjacent live parts.



WARNING!

Risk of injury from rotating parts!

The fan impeller can cause severe injuries.

- Switch off the unit and prevent it from reconnection before commencing any work on moving components of the fan. Wait until all parts have come to a standstill.

10.2 Maintenance Schedule:

The sections below describe maintenance work needed for the proper and trouble-free operation of the equipment.

If there are signs of increased wear during regular checks, shorten the required maintenance intervals to the actual wear and tear. Contact the manufacturer with any questions about maintenance work and intervals.

Interval	Maintenance task	Personnel
As required	Regular visual checks and acoustic checks for damage, dirt and function.	User
every six months	Check the electrical wiring.	Qualified personnel
every six months	Clean components/surfaces that come into contact with air.	Qualified personnel
quarterly	Check the electric heating coil for dirt, damage, corrosion and leak-tightness. Carefully vacuum the electric heating coil if dirty.	User

10.3 Maintenance work

10.3.1 Clean the inside of the unit

Check all elements that come into contact with air (internal surfaces of the unit, outlet elements etc.) for dirt or deposits during maintenance and use a commercially available product to remove.

11 Faults

The following chapter describes possible causes of faults and the work needed to rectify them. Should faults occur frequently, shorten the maintenance intervals in line with the actual loading on the unit.

Contact the manufacturer with any faults that cannot be rectified using the following information.

Behaviour in the event of faults

The following applies:

1. Immediately switch off the unit with faults that pose an immediate danger to persons or property!
2. Determine the cause of the fault!
3. Switch off the unit and prevent it from being reconnected if rectifying the fault requires work in the hazard area. Immediately advise a supervisor on site about the fault.
4. Either rectify the fault yourself or have it repaired by authorised personnel, depending on the nature of the fault.

The Fault table [► 31] provides information on who is authorised to rectify and remedy faults.

11.1 Fault table

Fault	Possible cause	Remedy
No function.	No power supply.	Check voltage, switch on repair switch. Replace fuse.
Unit is not heating sufficiently	Fan is not switched on.	Switch on fan at the controller.
	Air output is too low.	Set a higher fan speed.
	Filter is dirty.	Replace filter.
	Setpoint temperature on the controller is set too low.	Adjust the temperature setting on the controller.
	Control unit with integral sensor and/or external sensor is exposed to direct sunlight or positioned over a heat source.	Locate the control unit with integral sensor and/or external sensor in a suitable position.
	Air cannot blow out or in freely.	Remove obstacles at the air intake / air discharge.
	Electric heating coil is dirty.	Clean the electric heating coil.
Unit too loud	Fan speed too high.	Set a lower fan speed, if possible.
	Air intake / air discharge opening is obstructed.	Free air routes.
	Filter dirty.	Replace filter.
	Rotating parts unbalanced	Clean and/or replace impeller. Make sure that no balancing brackets are removed during cleaning.
	Fan dirty.	Clean dirt from fan.
	Electric heating coil dirty.	Clean dirt from the Electric heating coil.

11.2 Start-up after rectification of fault

After correction of the fault, carry out the following steps for recommissioning:

1. Make sure that all maintenance covers and access openings are sealed.
2. Switch off the unit.
3. Acknowledge the fault on the controller, if necessary.

Katherm QE

Assembly, installation and operating instructions

Table

Tab. 1	Operating voltage	6
Tab. 2	Technical data	11
Tab. 3	Maximum electrical connection values, electromechanical version.....	22

12 Certificates



EU-Konformitätserklärung

EU Declaration of Conformity

Déclaration de Conformité CE

Deklaracja zgodności CE

EU prohlášení o konformite

Wir (Name des Anbieters, Anschrift):

We (Supplier's Name, Address):

Nous (Nom du Fournisseur, Adresse):

My (Nazwa Dostawcy, adres):

My (Jméno dodavatele, adresa):

KAMPMANN GMBH & Co. KG

Friedrich-Ebert-Str. 128-130

49811 Lingen (Ems)

erklären in alleiniger Verantwortung, dass das Produkt:

declare under sole responsibility, that the product:

déclarons sous notre seule responsabilité, que le produit:

deklarujemy z pełną odpowiedzialnością, że produkt:

deklarujeme, vědomi si své odpovědnosti, že produkt:

Type, Modell, Artikel-Nr.:

Katherm QE

242***

Type, Model, Articles No.:

Type, Modèle, N° d'article:

Typ, Model, Nr artykułu:

Typ, Model, Číslo výrobku:

auf das sich diese Erklärung bezieht, mit der / den folgenden Norm(en) oder normativen Dokumenten übereinstimmt:

to which this declaration relates is in conformity with the following standard(s) or other normative document(s):

auquel se réfère cette déclaration est conforme à la (aux) norme(s) ou autre(s) document(s) normatif(s):

do którego odnosi się niniejsza deklaracja, jest zgodny z następującymi normami lub innymi dokumentami normatywnymi:

na který se tato deklarace vztahuje, souhlasí s následující(mi) normou/normami nebo s normativními dokumenty:

DIN EN 55014-1 ; -2

DIN EN 61000-3-2 ; -3-3

DIN EN 61000-6-1 ; -6-2 ; -6-3

DIN EN 60335-1 ; -2-30

Elektromagnetische Verträglichkeit

Elektromagnetische Verträglichkeit

Elektromagnetische Verträglichkeit

Sicherheit elektr. Geräte für den Hausgebrauch und

ähnliche Zwecke. Besondere Anforderungen für

Raumheizgeräte

Katherm QE

Assembly, installation and operating instructions



Gemäß den Bestimmungen der Richtlinien:

Following the provisions of Directive:
Conformément aux dispositions de Directive:
Zgodnie z postanowieniami Dyrektywy:
Odpovídající ustanovení směrnic:

2014/30/EU
2014/35/EU

EMV-Richtlinie
Niederspannungsrichtlinie

Lingen (Ems), den 01.09.2020

Ort und Datum der Ausstellung

Place and Date of Issue
Lieu et date d'établissement
Miejsce i data wystawienia
Místo a datum vystavení

Hendrik Kampmann

Name und Unterschrift des Befugten

Name and Signature of authorized person
Nom et signature de la personne autorisée
Nazwisko i podpis osoby upoważnionej
Jméno a podpis oprávněné osoby

2/2

Kampmann GmbH & Co. KG
Friedrich-Ebert-Straße 128 – 130
49811 Lingen (Ems)

Registergericht: Osnabrück, HRA 205688
USt-IdNr: DE313505294
Kampmann.de

Persönlich haftende Gesellschafterin:
Kampmann Beteiligungsgesellschaft mbH
Sitz: Lingen (Ems)

Registergericht: Osnabrück, HRB 211684
Geschäftsführer: Hendrik Kampmann

<https://www.kampmanngroup.com/hvac/products/trench-technology/katherm-qe>

Country	Contact
Great Britain	Kampmann UK Ltd.
	Dial House, Govett Avenue
	Shepperton, Middlesex, TW17 8AG
	T +44 1932/ 228592
	F +44 1932/ 228949
	E info@kampmann.co.uk
	W Kampmann.co.uk